

AUTOPART INTERNATIONAL BRAKE HARDWARE

When replacing brake pads or brake shoes in the brake system, it is imperative that the brake hardware is replaced.

Brake hardware is subject to the same heat, moisture and corrosion that help wear out brake rotors and pads. Heating and cooling cycles can weaken brake hardware like springs and anti-rattle clips. Weak hardware parts can result in excessive caliper/pad movement or binding causing noise or other related problems...reducing braking effectiveness.

Even if a piece of brake hardware looks new, it should be replaced when the brake pads are replaced as metal fatigue cannot always be seen with the naked eye.

These conditions can lead to uneven and premature pad wear, rotor warping and pulling. A few dollars spent on hardware now can save a few hundred dollars in repairs and downtime later. Replacing the brake hardware will help insure the brake job is complete with confidence. Autopart International's premium friction includes brake hardware.

To learn more about Al's Premium Friction Brake Pads with Hardware, contact your local Al store for details.

THE ULTIMATE SOURCE FOR THE PROFESSIONAL SERVICE PROVIDER www.autopartinternational.com

